

Driver

1. Remove the screws on the driver housing cover.
(On the bottom of the SBAS; On the bracket side of U-HALL/U-HALM.
2. Remove the driver housing cover.
3. Remove the screws which hold the driver.
4. Loosen the wire, then switch the driver.
5. Re-attach new driver with existing screws.

Lens

1. Remove all the screws securing the lens to the fixture.
2. Remove the waterproof silicone pad.
3. Replace with desired lens and carefully replace the silicone pad.
4. Secure new lens with existing screws.

Board

1. Remove the lens first. (See previous steps.)
2. Remove the screws which are holding the board.
3. Disconnect the power cable that goes into the board.
4. Remove the existing board.
5. Insert new board and replace with existing screws.
6. Re-attach power cable to the board.
7. Replace and secure lens.