


1. Unscrew driver compartment screws and CAREFULLY remove and RETAIN gasket.
2. Disconnect input power (brown) from sensor black line.
3. Connect input power (brown) to driver purple line.

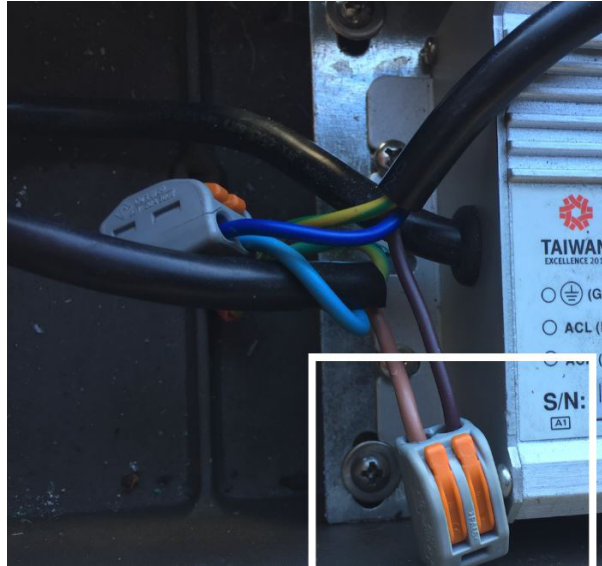

4. Leave all other connections as is.
5. CAREFULLY replace gasket exactly as it was removed.

(Improper gasket reseating will void the warranty.)



6. Tighten driver compartment screws.