

Driver Replacement


1. Disconnect power prior to installing or troubleshooting the driver
2. Remove the screws of the driver housing (circled in yellow below) and carefully remove the driver housing



3. Loosen the screws which holds the driver (circled in yellow below)




4. Disconnect the driver from the LED board, via the quick connectors (circled in yellow below)

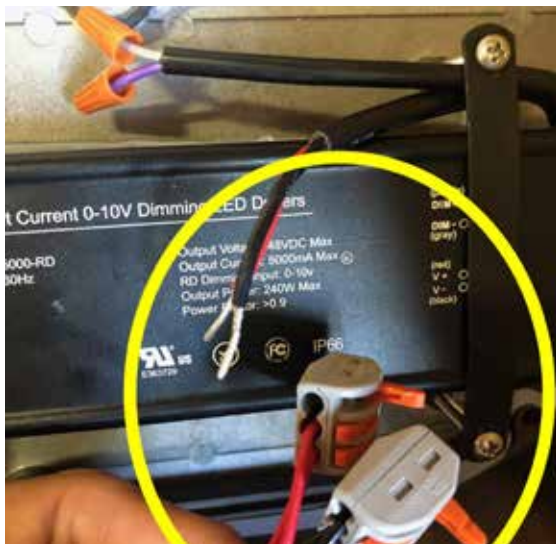

5. Cut the power wires from the driver, leaving enough lead to connect the replacement driver, and for Altech Electronics to duly perform a Root Cause Analysis of the returned driver (circled in yellow below)



6. Remove the existing driver and replace with the new driver. Connect the power wires, and quick connect the driver to the LED board (circled in yellow below)

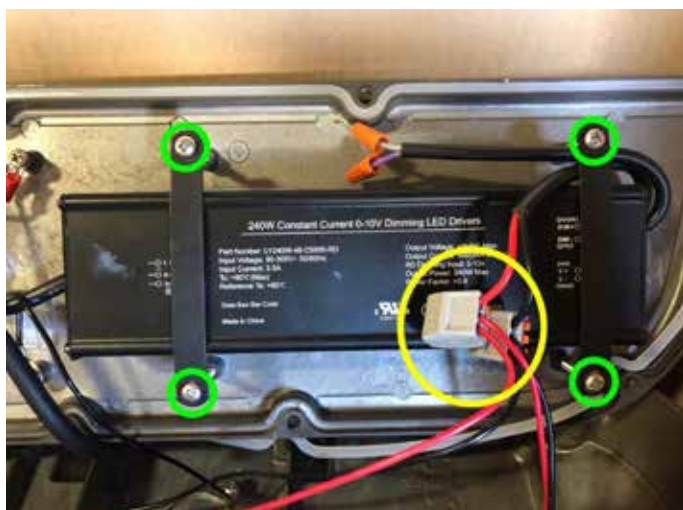

7. Tighten the screws which hold the driver (circled in green above)
8. Re-attach the driver housing, ensuring the existing gasket is properly installed and aligned to the edge of the plate, as it acts as a seal to the fixture (indicated by the yellow arrow below)



9. Tighten the screws holding the housing plate (circled in yellow below)

